

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the packs supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

To maintain the appearance of your vanity unit(s), regular dusting with a soft cloth will be adequate, for grime stains wipe with a damp cloth and mild detergent.

The manufacturer reserves the right to alter specifications without prior notice.

IMPORTANT NOTES:

1. Please ensure that the packaging is disposed of in a safe environmentally friendly way.
2. There are many small components used in the construction of this vanity unit. These loose items should be kept away from young children whilst assembling your vanity unit.
3. Where the panels are multi-drilled, ensure the correct hole location is used. Not all of the pre-drilled holes are necessarily used in the assembly of your vanity unit.
4. For your own safety we recommend the use of protective eye wear whilst assembling your vanity unit.
5. When tightening cam studs, we recommend a power tool **is not** used.
6. The additional fittings and components left after assembly are required for installation. Please do not discard.


Cams and cam studs, see 1.1










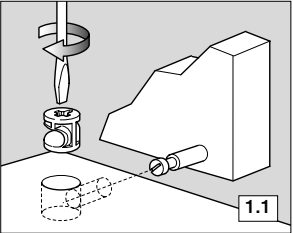








When fitting cams into holes ensure that the arrow on the top of the cam points to the intersection hole, which is usually on the nearest edge of the panel. To fit two panels together the cam stud will slide into the cam. To secure simply turn the cam in a clockwise direction, with a flat head screwdriver, until it locks.

Glue
We recommend the use of a strong PVA wood glue (NOT SUPPLIED) in all dowel holes. Wipe away excess glue with a clean damp cloth.
NOTE: EXCESSIVE USE OF GLUE MAY CAUSE THE PANELS TO SPLIT.

Excentriques et goujons d'excentriques, voir 1.1
Lorsque vous placez les excentriques dans les trous, veillez à ce que la flèche sur le dessus de l'excentrique pointe vers le trou d'intersection qui est habituellement situé sur le bord le plus proche du panneau. Pour rejoindre deux panneaux, faites glisser le goujon d'excentrique dans l'excentrique. Pour fixer, tournez simplement l'excentrique dans le sens des aiguilles d'une montre à l'aide d'un tournevis plat jusqu'à ce qu'il se verrouille.



Colle
Nous recommandons d'utiliser une colle à bois polyvinyle forte (NON FOURNIE) dans tous les trous de cheville. Essayez la colle en excès avec un chiffon propre humide. **REMARQUE : UN EXCÈS DE COLLE PEUT FAIRE SE ENDRE LES PANNEAUX.**




FITTINGS CHECK LIST		Liste de vérification des accessoires	
Meuble de rangement	Description		QTY Qté
	B 51		6
	B 52		6
	B 53		6
	B 54		4
	B 55		2
	B 56	 30mm	6
	B 58	 12mm	16
	B 60		8
	B 62		2
	B 65		2
	B 69		4
	B 70		4
	B 77		2
	B 78		2
	B 132		3
	B 133		3
	B 134	 12mm	12
	B 135	 25mm	8

[illegible]


3

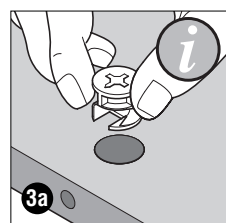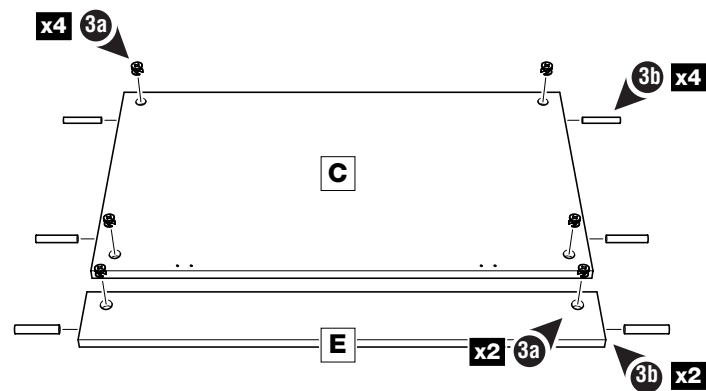



6 Positions

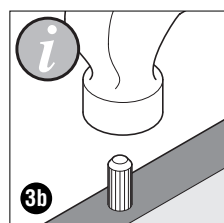


6 Positions



4

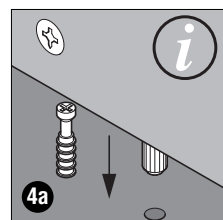
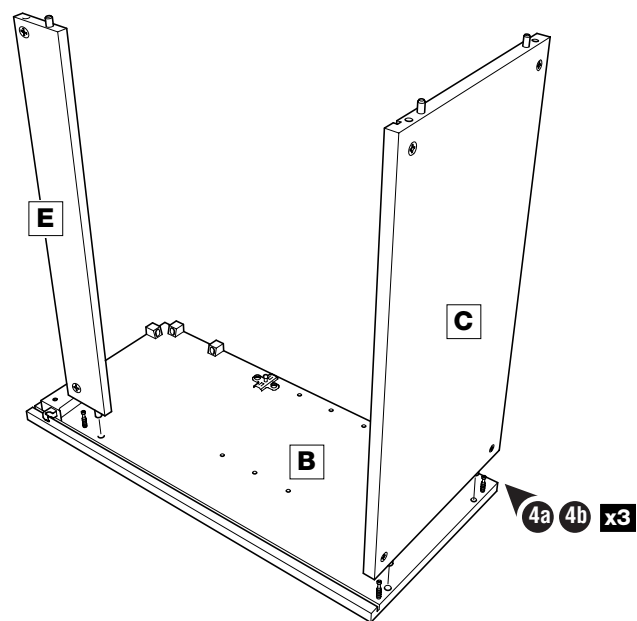


3 Positions

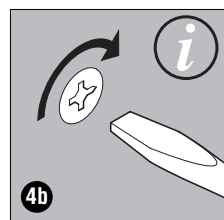


3 Positions

5

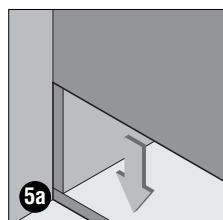
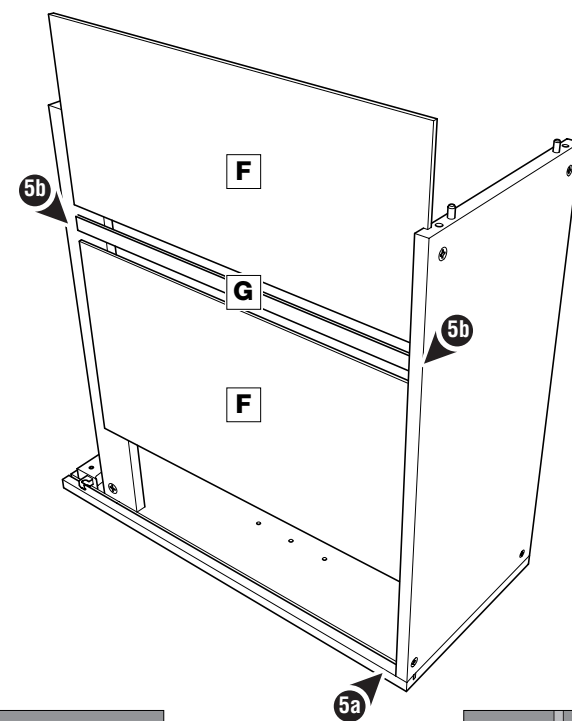


1 Position

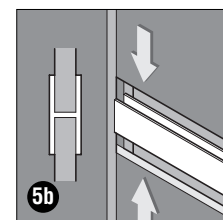


2 Positions

6

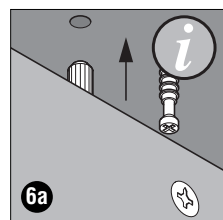
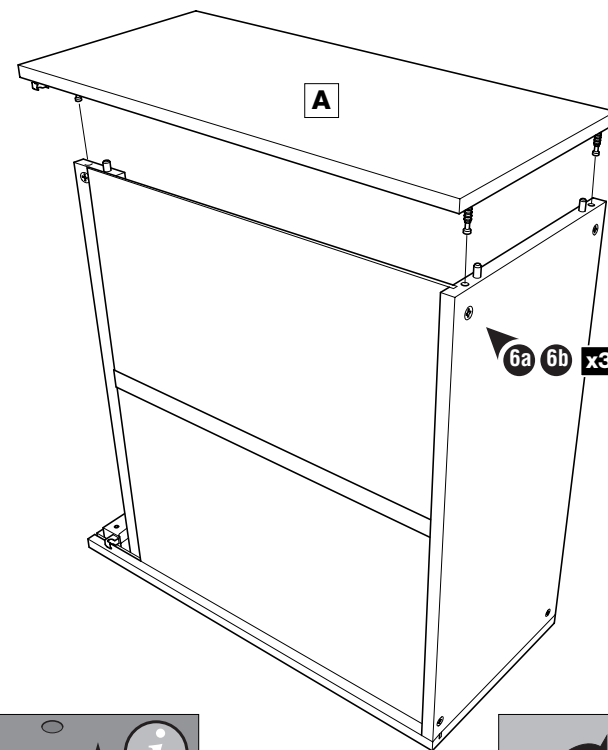


3 Positions

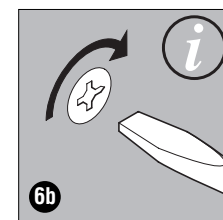


3 Positions



7

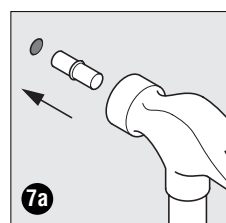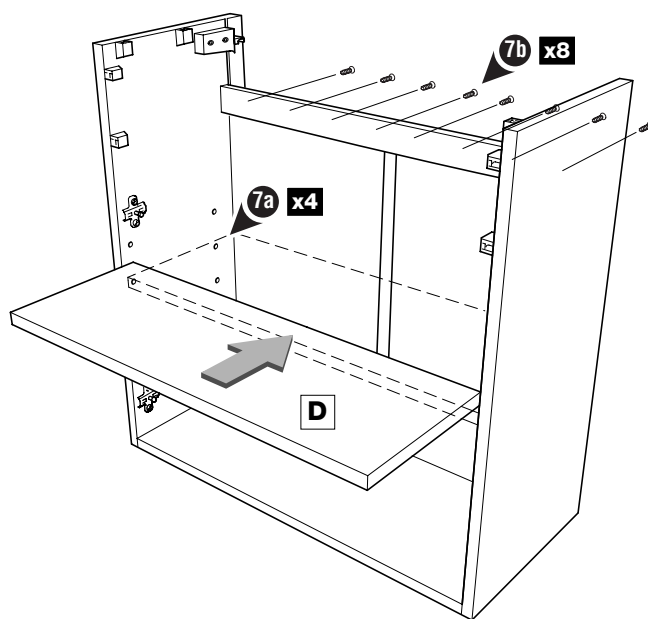

4 Positions

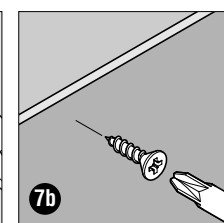



8 Positions




8 OPTIONAL OPTION

NOTE: Batten fixing screws and plugs are not supplied, only use suitable fixings depending on your floor construction. If in doubt consult an expert.


REMARQUE : Des vis et les prises de fixation de batten ne sont pas fournies, seulement les fixings appropriés d'utilisation selon votre construction de plancher. En cas de doute, consultez un spécialiste.

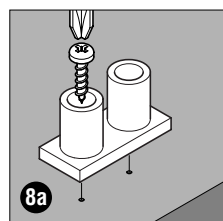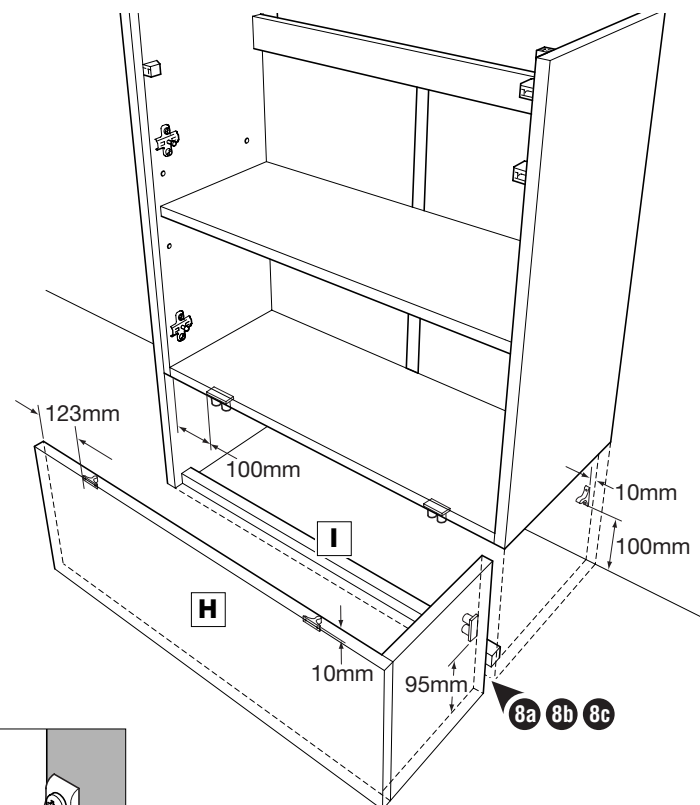




as required

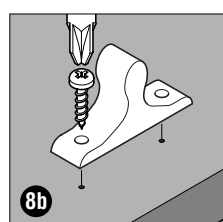

as required

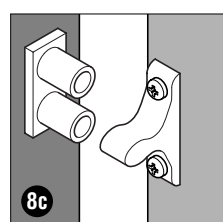



as required




9 OPTIONAL OPTION

NOTE: If fitting part 'J', items 'H' and 'I' will also need to be used.

REMARQUE : En cas de montage de l'élément "J", les éléments "H" et "I" doivent également être utilisés.

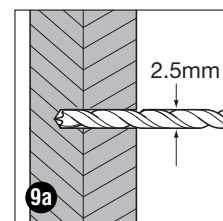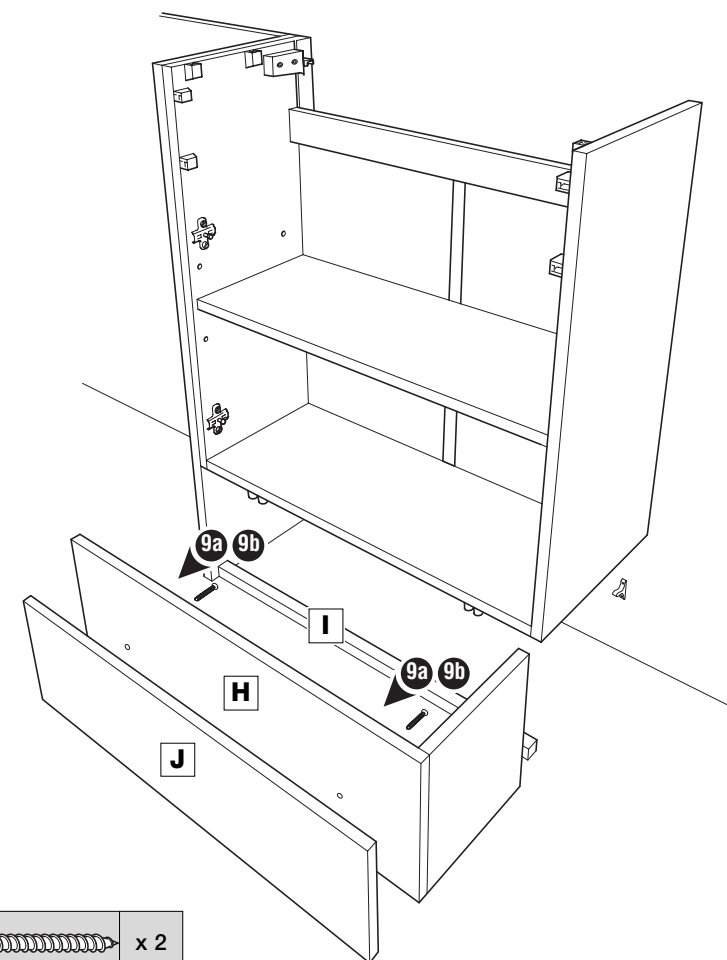

2 Positions

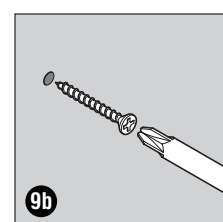

2 Positions

